


442382

DE: Montageset | EN: mounting set | FR: kit de montage | IT: set di montaggio

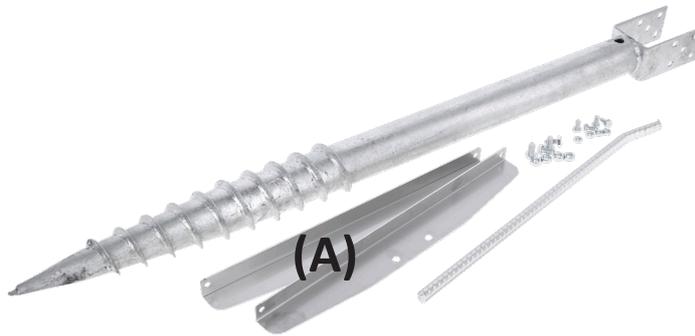

DE: Lieferumfang

- 1 x Spiral-Erd-/Halteanker
- 2 x Edelstahl Vertikalschiene **(A)**
- 1 x Eindrehhilfe
- 1 x Schraubenset:
 - M6x18 + M6 Mutter (4x)
 - M8x16 + M8 Mutter (4x)
 - M10x20 + M10 Mutter (4x)

EN: Scope of delivery

- 1 x spiral ground/holding anchor
- 2 x stainless steel vertical rail **(A)**
- 1 x insertion aid
- 1 x screw set:
 - M6x18 + M6 nut (4x)
 - M8x16 + M8 nut (4x)
 - M10x20 + M10 nut (4x)


FR: Contenu de la livraison

- 1 x ancrage de terre/de retenue en spirale
- 2 x rail vertical en acier inoxydable **(A)**
- 1 x aide au vissage
- 1 x kit de vis:
 - M6x18 + M6 écrou (4x)
 - M8x16 + M8 écrou (4x)
 - M10x20 + M10 écrou (4x)


IT: Ambito di consegna

- 1 x spirale di terra/ancoraggio
- 2 x guida verticale in acciaio inossidabile **(A)**
- 1 x aiuto all'inserimento
- 1 x set di viti:
 - M6x18 + M6 dado (4x)
 - M8x16 + M8 dado (4x)
 - M10x20 + M10 dado (4x)

100W

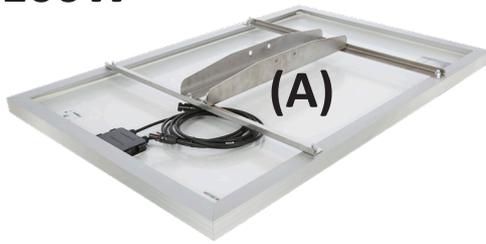

45W

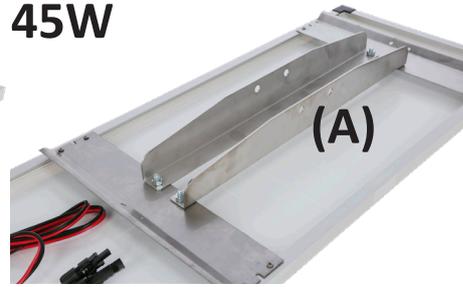

DE:

Vertikalschiene **(A)** mit M8x16 und M8 Mutter an den Querstreben befestigen.

(ACHTUNG: Bei 45W muss die untere Querstrebe um 180° gedreht werden!)

EN:

Fix the vertical rail **(A)** with M8x16 and M8 nut to the cross braces.

(ATTENTION: For 45W, the lower crossbar must be turned by 180°).

1

FR:

Fixer le rail vertical **(A)** avec M8x16 et un écrou M8 sur les barres transversales.

(ATTENTION : pour le 45W, la traverse inférieure doit être tournée de 180° !)

IT:

Fissare la guida verticale **(A)** con M8x16 e dado M8 ai sostegni trasversali.

(ATTENZIONE: Per 45W, la traversa inferiore deve essere girata di 180°).



DE:

Solarmodul mit M10x20 und M10 Mutter am Erdanker befestigen.

EN:

Fasten the solar module with M10x20 and M10 nut to the ground anchor.

2

FR:

Fixer le module solaire avec M10x20 et un écrou M10.
à l'ancrage dans le sol.

IT:

Fissare il modulo solare con M10x20 e dado M10 all'ancoraggio a terra.